


T135SE/ T135S WIRING DIAGRAM

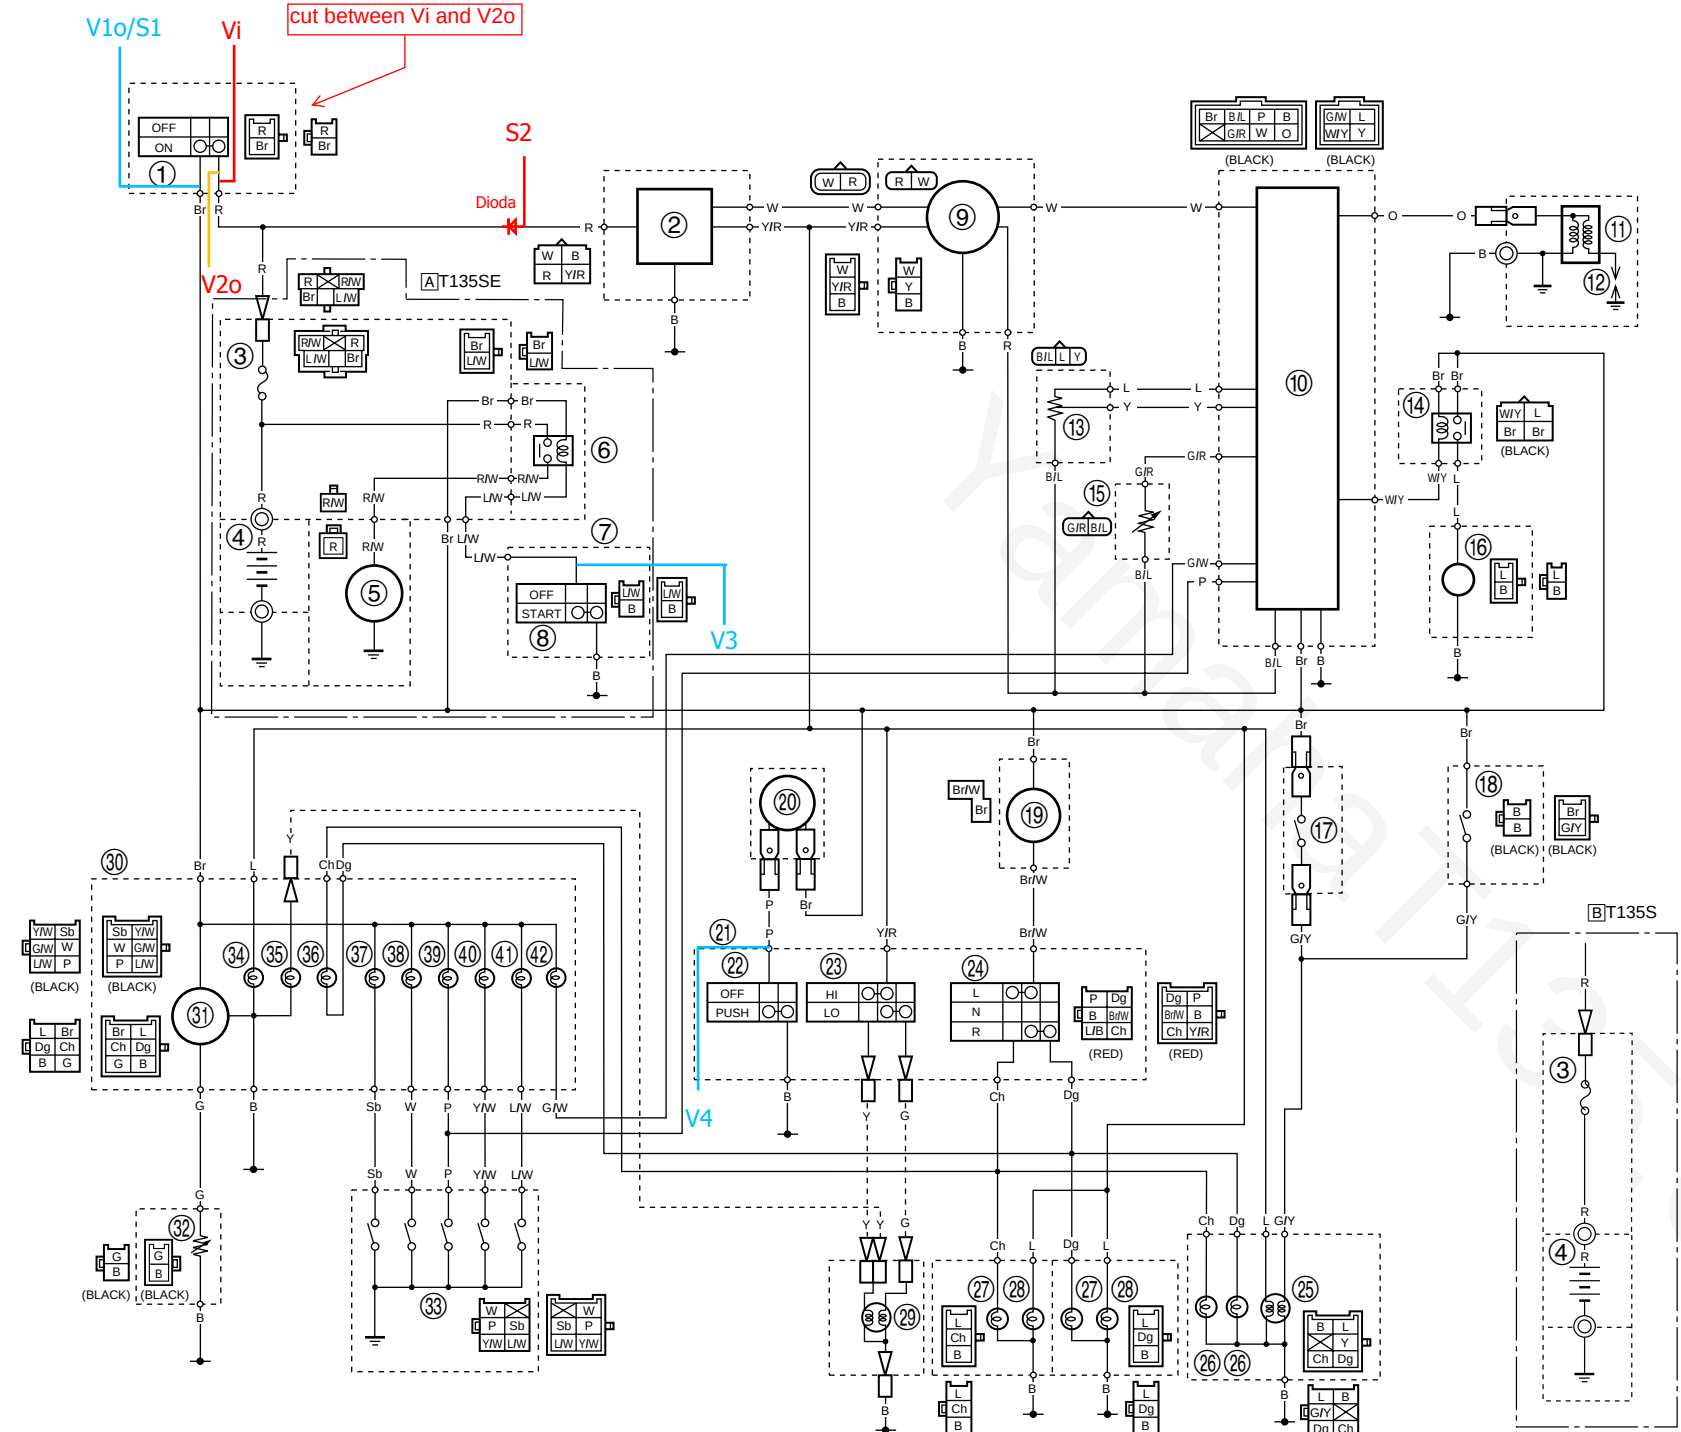

- ① Main switch
- ② Rectifier/regulator
- ③ Fuse
- ④ Battery
- ⑤ Starter motor
- ⑥ Starter relay
- ⑦ Right handlebar switch
- ⑧ Start switch
- ⑨ A.C. magneto
- ⑩ C.D.I. unit
- ⑪ Ignition coil
- ⑫ Spark plug
- ⑬ Throttle position sensor
- ⑭ Fan motor relay
- ⑮ Thermo sensor
- ⑯ Fan motor
- ⑰ Front brake light switch
- ⑱ Rear brake light switch
- ⑲ Turn signal relay
- ⑳ Horn
- ㉑ Left handlebar switch
- ㉒ Horn switch
- ㉓ Dimmer switch
- ㉔ Turn signal switch
- ㉕ Tail/brake light
- ㉖ Rear turn signal light
- ㉗ Front turn signal light
- ㉘ Auxiliary light
- ㉙ Headlight
- ㉚ Meter assembly
- ㉛ Fuel gauge
- ㉜ Fuel sender
- ㉝ Neutral switch
- ㉞ Meter light
- ㉟ High beam indicator light
- ㊱ Turn signal indicator light
- ㊲ Neutral indicator light
- ㊳ 1st gear position light
- ㊴ 2nd gear position light
- ㊵ 3rd gear position light
- ㊶ 4th gear position light
- ㊷ Coolant temperature warning indicator light

COLOR CORD

B.....Black
Br Brown
Ch Chocolate
Dg Dark green
G Green
L Blue
O Orange
Sb Sky blue

P.....Pink
R.....Red
W White
Y.....Yellow
B/L.....Black/Blue
Br/W.....Brown/White
G/R.....Green/Red
G/W.....Green/White

G/Y Green/Yellow
L/B.....Blue/Black
L/W Blue/White
R/W Red/White
W/Y White/Yellow
Y/R Yellow/Red
Y/W Yellow/White